

176 MITTEL DRIVE, WOOD DALE, IL 60191

"POPPI" ELECTRIC HOT AIR POPPER Operation Manual

MODELS: 16724-C, 16724-D, 16724-E, and 16724-I

120/240 Volt, 60 Hz 3,250 Watts, Single Phase

120/208 Volt, 60 Hz 3,250 Watts, Single Phase

230 Volt, 50 Hz 3,250 Watts, Single Phase

200 Volt, 50/60 Hz 3,250 Watts, Single Phase

READ and **UNDERSTAND** these servicing, and safety instructions before servicing this popcorn machine

TABLE OF CONTENTS

| I. | Safety Alert Symbol |
|-------|--|
| II. | Safety First |
| III. | Introduction |
| IV. | Purpose of Manual |
| V. | Product Identification |
| VI. | Principles of Popcorn Machine Operation4 |
| VII. | Control Switches |
| VIII. | Operating Instructions5 |
| IX. | Sanitation Instructions6 |

I. SAFETY ALERT SYMBOL

The symbol shown below is used to call your attention to instructions concerning your personal safety and the safety of others. Watch for this symbol. It points out important safety precautions. It means **ATTENTION! Become Alert! Your personal safety is involved!** Read the message that follows and be alert to the risk of personal injury or death.



II. SAFETY FIRST



The information in this manual is essential for the safe installation and maintenance of your Cretors popcorn machine. The manual must be read and understood before installing and operating the equipment, or equivalent training must be provided.



"The employer shall instruct each employee in the recognition and avoidance of unsafe conditions, as well as, regulations applicable to his work environment, to control or eliminate any hazards, or other exposure to illness or injury". Ref.: 29 CFR 1926.20 (b)(4)(a)(2)



It is understood that safety rules within individual companies vary. If a conflict exists between the safety procedures contained in this manual and the rules of a using company, the more stringent rule should take precedence.

III. INTRODUCTION

This manual is filled with time-saving and money-saving information regarding your Cretors popcorn machine. There is nothing more important than the safety aids and warnings that are throughout this document. The Safety Alert Symbol is used to identify topics of primary safety concern wherever they appear. Furthermore, a separate section has been included which deals exclusively with service and accident prevention.

If, after reviewing this manual, anything is unclear or technical problems are encountered, contact the distributor from whom you purchased your machine for assistance. If there are any additional questions, feel free to contact our Customer Service Department at the address and/or phone number listed on back cover of this manual. Always have the model and serial number of your machine available to assist in obtaining the correct information.

IV. PURPOSE OF MANUAL

This instruction manual is intended to familiarize owners with the operation and safety procedures associated with your Cretors popcorn machine.

It is important that this manual be kept available to operating personnel.



A person who has not read and understood all operating and safety instructions is not qualified to operate the popcorn machine.

V. PRODUCT IDENTIFICATION

CRETORS POPCORN MACHINE: POPPI HOT AIR DRY POPPER: 16724

VI. PRINCIPLES OF POPCORN MACHINE OPERATION

Theory and Observations of Popcorn Machine Operation

- A. The Popper must sit level in order to ensure that the kernels are spread evenly in the popping chamber. If they are not spread evenly, efficiency will be lost, and the kernels may burn instead of pop.
- B. In order to pop corn, the popping chamber and other surfaces near the heating elements are necessarily and unavoidably heated to temperatures high enough to pop popcorn. The temperature is controlled by using a digital temperature controller. The factory installed temperature set point is 455° F.



All surfaces should be considered hot. Contact with these surfaces will burn and scald you. Do not touch the neck, popping chamber or parts in direct vicinity of the heating elements.

C. The popping chamber is heated to high temperatures by the electric heating elements to reach proper popping temperature. An operator is required in the vicinity of the kettle only when handling corn or dumping popped corn from the kettle. Neither of these operations requires direct contact with the popping chamber.



Direct contact with the popping chamber, heating elements, or other surfaces **could result in serious burns or scalds**. Keep away from the popper whenever possible. Use the handle when dumping the kettle, and use the provided cups when necessary to measure corn and engage the door flap.

- D. As the popcorn pops, it will expand up and out of the popping chamber. When the corn finishes popping, the corn remaining in the chamber can be removed by manually tilting the machine forward using the dump handle.
- E. The heat indicator light will be on when the heating element is heating. The heating element will heat until the desired set point is reached.

VII. CONTROL SWITCHES

INDICATOR LIGHT -Indicates heating element On/Off.

ROCKER SWITCH -Turns blower motor and heating element On/Off.

DIGITAL CONTROL -Displays and sets the temperature of the popping chamber.

VIII. OPERATING INSTRUCTIONS



Do not attempt to operate your Cretors popcorn machine until you have read and understood this manual. Failure to do so may result in serious injury or death.



Do not attempt to operate your Cretors popcorn machine unless the installation instructions have been strictly adhered to. Failure to do so may result in serious injury



Operate your Cretors popcorn machine only if it is in sanitary condition (See SANITATION INSTRUCTIONS). Failure to do so may result in illness to your customers.

- A. Turn the heat/motor switch to the "ON" position. The blower will start and the heating element should begin producing heat. The indicator light will light up when the heating element is on.
- B. Allow Popper to run a couple of minutes to stabilize the temperature. Once the digital temperature display is around 285°F, the machine is ready for use. Once corn is added to the chamber, the digital temperature display will begin to rise to popping temperature.

NOTE: To change the set temperature, press the "set" button on the digital control, then use the up or down arrows to increase or decrease the temperature to the desired point, then press the "set" button again. The new temperature is now the set point. The range of accepted values is 300°F - 480°F, with the factory installed set point being 460°F.



Avoid contact with the popper. Contact with a hot popping machine may result in serious burns or scalds.



WARNING! Allow for ample ventilation and air circulation space at the rear and sides of the popper.

C. Using the provided scoop, insert 12 ounces of unpopped corn into popping chamber. The provided scoop holds 12 ounces of unpopped corn. This is the maximum amount that should be placed into the chamber at one time.



CAUTION: Use the provided scoop to push the door flap forward. This flap will become extremely hot, and the provided scoop should be used to engage door flap in a safe manner. DO NOT TOUCH WITH YOUR HANDS!



WARNING! Over charging the chamber with too much corn can cause the opening to get clogged, possibly placing the machine in a fire condition. Only use good popcorn.

D. Under normal conditions, the first few kernals should start popping in 1 – 2 minutes. This will produce the greatest volume, finest appearance and best eating qualities.

<u>NOTE:</u> A venting cover located on the back of the machine can be utilized to increase or decrease the air flow if the desired temperature is not easily reached. However, safety stops have been placed to ensure that the vents cannot be completely closed.



If the vents are completely closed, the air flow may not be enough to push the popped corn up and out of the chamber, resulting in a build-up of heat. This may lead to a fire in the popping chamber. If the corn begins to scorch and/or smoke, maximize the vents to increase the air flow. This will push the popped corn out of the chamber and away from the heating element.

- E. As the corn pops and expands upward, it will be ejected from the popping chamber.
- F. Once the popping has subsided (usually around $2\frac{1}{2}$ 3 minutes), use the dump handle to tilt the machine forward to eject any remaining popped corn. A few gentle "shakes" may be necessary to ensure all popped corn is out of the chamber. **NOTE**: If the corn does not pop within 6 minutes, the corn quality is probably poor and should be dumped out to prevent corn from drying out and potentially starting a fire. Only use good quality popcorn seed.
- G. When all the popped corn is ejected from the popping chamber, return the handle to it's original position.



Only touch the black portion of the pivot handle, as all other surfaces should be considered hot.

H. Repeat popping steps C-G. On the last popping, return the pivot handle to the upright position, turn off the motor/heat switch.

<u>NOTE</u>: When the heat/motor switch is flipped to the "OFF" position, the heating element is shut down, but the blower will continue to run for approximately one (1) minute to allow it to cool. This prevents damage to the internal mechanical parts.

Follow the recommended sanitation procedures.

IX. SANITATION INSTRUCTIONS



Be certain the machine is turned off and power is unplugged before sanitizing this machine. Failure to do so could result in injury or death.



Do not clean heated surfaces until they have been given sufficient time to cool. Failure to do so may result in serious burns.

Do not attempt to clean a hot popping chamber. Failure to do so may result in serious burns or scalds.

- 1. The unit is a polished stainless steel 304 finish and is very easy to clean. After the final popping, the best practice is to wait until all surfaces have cooled.
- 2. Once the popper has had sufficient time to cool, loosen the two wing nuts at the front near the door flap.
- 3. Remove the two wing nuts at the rear of the head.
- 4. Slide the top panel off, revealing the popping chamber.
- 5. Take a dry cotton towel and wipe the interior of the popping chamber, clearing any remaining particulate. NOTE: Do not use water or other cleaning agent, as the moisture can affect the heating coils, possibly causing an electrical short.
- 6. Replace the top panel, and reinsert the two rear wing nuts. Tighten all wing nuts on the head.
- 7. The popping chamber should be cleaned at the end of each day of use.
- 8. The exterior should be wiped with a dry cotton cloth as needed.

This manual is filled with time-saving and money-saving information regarding your Cretors popcorn popper. There is nothing, however, more important than the safety aids and warnings found throughout this document.

If you have any questions regarding the operation or cleaning of your Cretors popcorn popper, contact your local distributor. Should you have any difficulties or are unable to reach them, feel free to contact the Customer Service Department at C. Cretors and Company.

Additional copies of this manual can be obtained from C. Cretors and Company at the address listed below. Please provide model and serial number when requesting additional copies of this manual. There will be a nominal charge for additional copies.

Cretors guarantees this machine to be free of defects in parts, materials and workmanship for two years. Please take this time to fill out the factory registration card and return it to the factory to activate your warranty. If you have any questions concerning the Cretors' warranty, please contact your local distributor or the Customer Service Department at C. Cretors and Company.



C. CRETORS AND COMPANY
176 MITTEL DRIVE
WOOD DALE, IL 60191
PHONE (773) 588-1690, (800) 228-1885, FAX (847) 616-6970
WEB SITE: http://www.cretors.com Email: postmaster@cretors.com
Cretors joins the information age! Check out our links http://www.twitter.com
http://www.facebook.com/pages/Chicago-IL/C-Cretors-Co/90143449620