

# **BATTER DISPENSER**

# 7050-()

## **SETUP & CLEANING INSTRUCTIONS**

#### **Important**

- 1. To get the best operation and life from your machine, please read and comply with these instructions.
- 2. Clean batter dispenser thoroughly before first use & after each use using cleaning instructions below.

### <u>Setup</u>

- 1. Remove batter dispenser from the packaging. Make sure all pieces have been included.
- 2. Clean bucket & lid before using. Wash using mild soap & water solution with sponge. Run water through the spout.
- 3. Place batter dispenser on a sturdy level surface away from the edges of the countertop.
- 4. Pour mixed batter into bucket.
- 5. Lift door assembly up and off of the body assembly.
- 6. Place batter bucket into body assembly with spout facing outward.
- 7. Lower the door assembly back on the housing, sliding it over the spout.

### Cleaning

- 1. Lift door assembly up and off of the body assembly.
- 2. Remove the bucket.
- 3. Wash the door panel and body with a warm water and soap solution using a sponge or cloth.
- 4. Discard remaining batter in bucket and clean it and the lid with a warm water and soap solution.
- 5. Run water through the spout until no batter remains. NOTE: Spout may be removed for easier cleaning.
  - Allow all components to air dry, or wipe dry with a towel.

    77409, DOOR ASSEMBLY

    48512, LID

    48513, SPOUT
    77405, SPOUT SHANK

NEMCO Food Equipment 301 Meuse Argonne Hicksville, Ohio 43526 Phone: (419) 542-7751 Fax: (419) 542-6690 Toll Free: (800) 782-6761

www.nemcofoodequip.com