
Below there are some simple instructions for loading and cleaning your machine.

WARNING


ON
Operations to do with the machine turned ON.

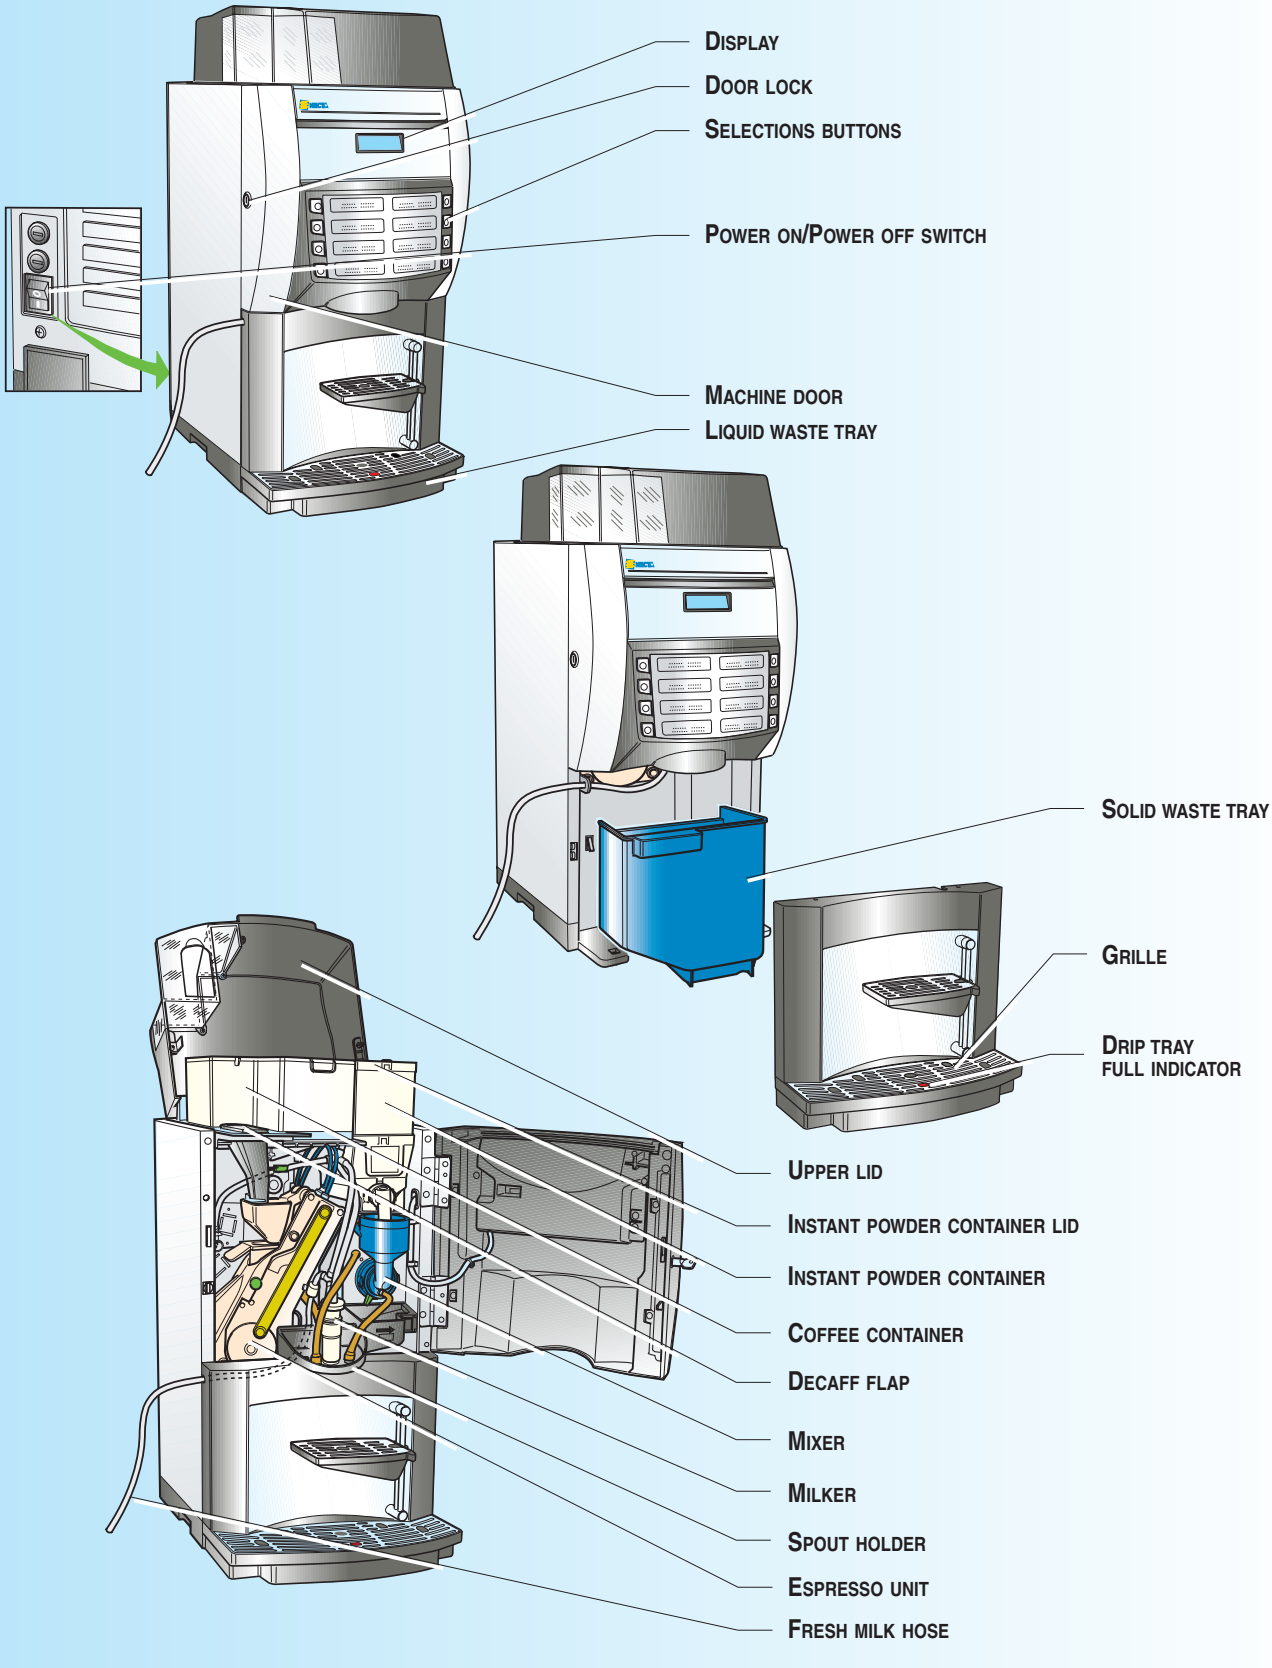

CLEANING / LOADING

LOADING


1

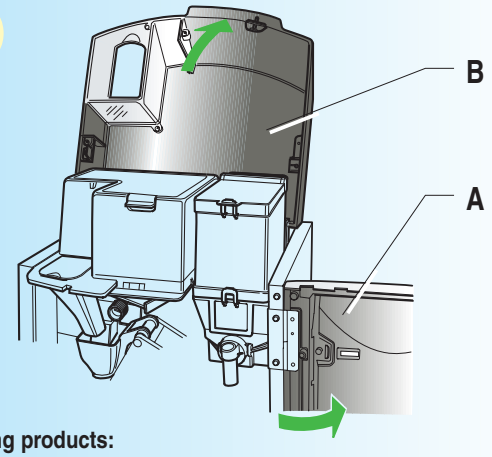

Loading products:

- Open the dispenser door (**A**).
- Lift the upper lid (**B**).

2

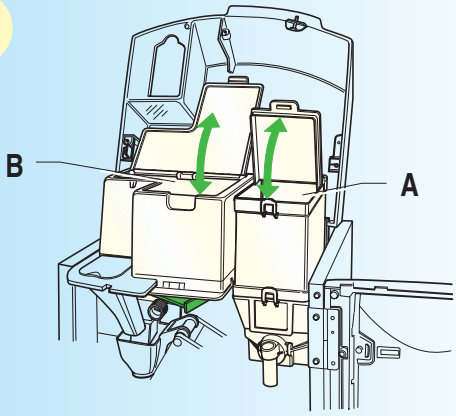


Loading products:

- Open the instant powder container's lid.
- Load the product in (**A**), taking care not to compact the instant powder.
- Load container (**B**) with coffee beans.

REGULAR CLEANING


1

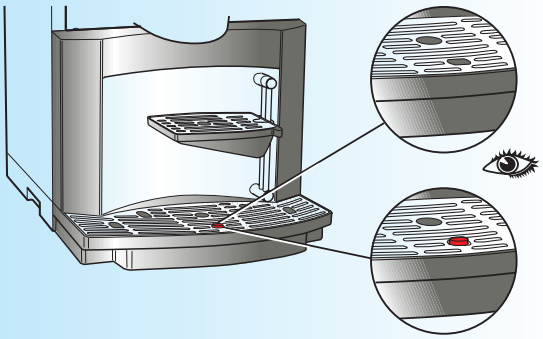

Emptying the liquid waste tray:

When the red float signal lifts up through the grille, it is necessary to empty the liquid waste tray immediately. The dispenser will then work normally. **It is advisable not to wait until the red drip tray full indicator is visible. It is recommended that the liquid waste tray is emptied regularly.**

2

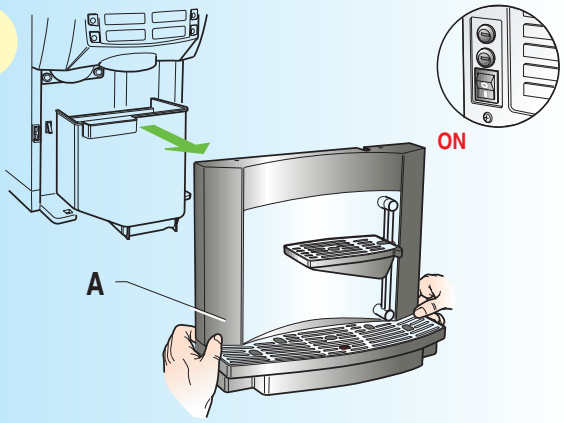

Emptying the liquid waste tray:

- Take hold of the sides of the liquid waste tray (**A**) firmly, then lift slightly and pull forward.
- Empty the tray and if necessary, wash it using a mild detergent solution.
- Re-fit the tray back into position.

REGULAR CLEANING

3




Emptying the solid waste tray:

When the "WASTE TRAY FULL" message appears on the display, the solid and liquid waste trays require emptying.

- Take hold of the sides of the liquid waste tray firmly. Lift and pull.
- Remove the solid waste tray (**A**) and empty it.
- Fit both the solid and the liquid waste trays back into position.

4

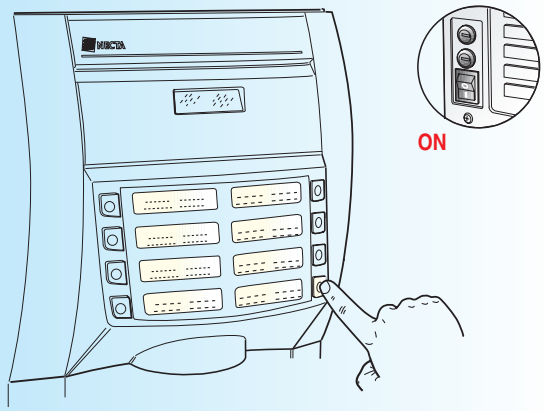

Rinsing the mixer:

- With the door closed, press and hold the last selection button for 3 seconds.
- When "Password" appears on the display.
  Enter 5 digit password for rinse function.

The mixer rinsing cycle must be carried out regularly or after loading the instant powder.

CLEANING THE MILK CIRCUIT

1



CLEANING OF THE MILK CIRCUIT MUST BE CARRIED OUT AT THE END OF USE.


- At power-on and during a mixer rinse the machine proposes the steps to be carried out for washing the milk circuit.
- It may be useful to place a container under the spouts for collecting the liquid residue from washing.

2



- Take the priming tube out of the fresh milk container.
- Press the confirmation button to continue.


3

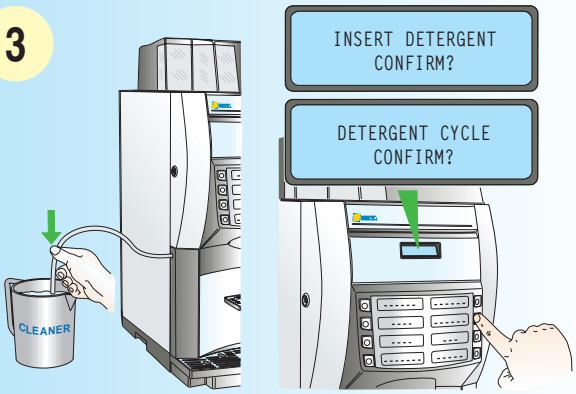

DO NOT USE DETERGENTS THAT ARE TOO SCENTED.


- Insert the priming tube in a container with a detergent solution.
- Press twice the confirmation button to start the cleaning cycle.

4

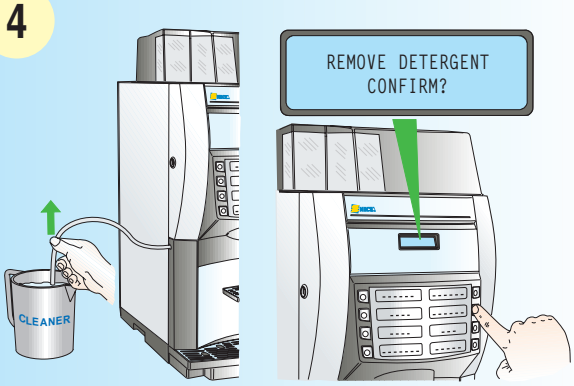

- Take the priming tube out of the container with the solution used.
- Press the confirmation button to continue.


5

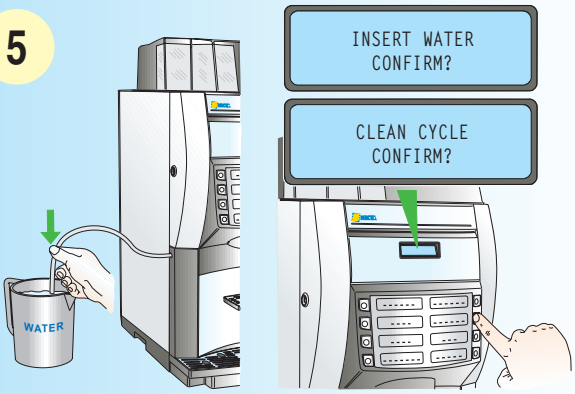

RINSING MUST ALWAYS BE CARRIED OUT AT THE END OF THE CLEANING CYCLE.

- Insert the priming tube in un container with clean water.
- Press twice the confirmation button to start the rinse cycle.


6

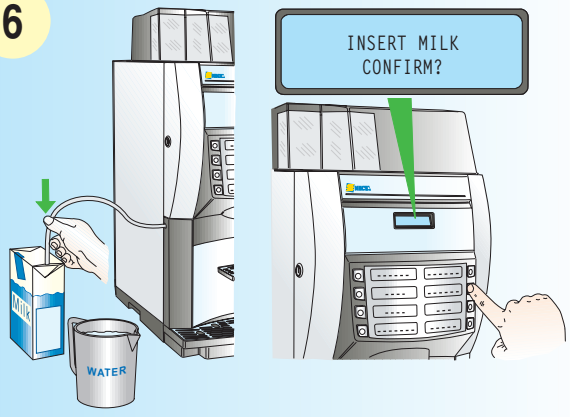

- Replace the priming tube in the fresh milk container.
- Press the confirmation button to complete.
- Empty out all washing residue from the liquid waste container.

CLEANING THE MILKER NOZZLE


1

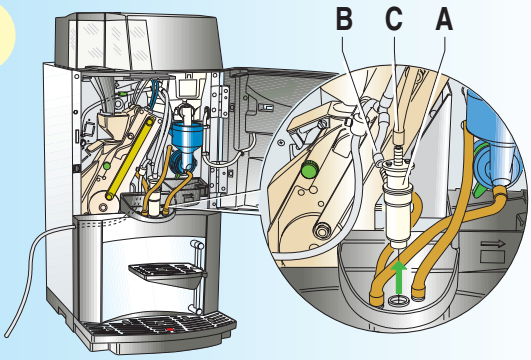

THE MILKER NOZZLE MUST BE DISASSEMBLED REGULARLY FOR CLEANING.


- Open the machine door and disconnect tubes (**B**) and (**C**) from the milker (**A**).
- Remove the milker from the spouts support.

2

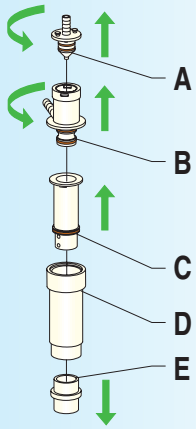

- Rotate and pull at the same time part (**A**).
- Rotate and pull at the same time part (**B**).
- Separate parts (**C**), (**D**) and (**E**).


3

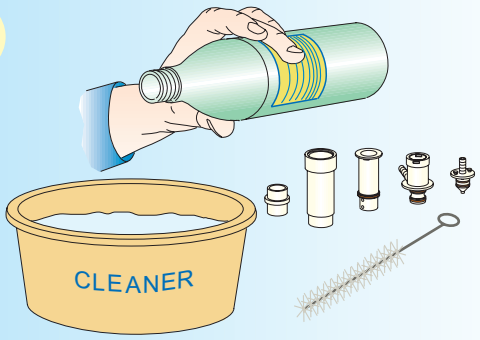

DO NOT USE DETERGENTS THAT ARE TOO SCENTED.


- Wash all parts with the detergent solution taking care to mechanically remove all visible residue and product layers, using a brush, if necessary.
- Rinse and dry thoroughly all parts.

4

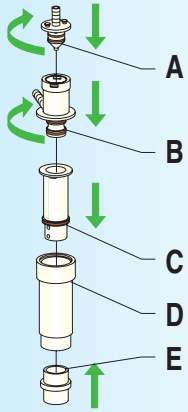

- Reassemble parts (**C**), (**D**) and (**E**).
- Replace part (**B**) and rotate to secure it.
- Replace part (**A**) and rotate to secure it.

5

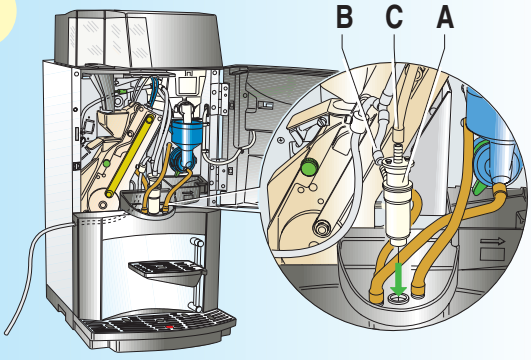

- Replace milker nozzle (**A**) in the spouts support.
- Correctly reconnect tubes (**B**) and (**C**) to the milker nozzle.

6




- Close the machine door.

AT POWER-ON THE PROCEDURE FOR WASHING THE MILK CIRCUIT IS PROPOSED.
PRESS THE CONFIRMATION BUTTON TO START THE PROCEDURE OR ANY OTHER BUTTON TO SKIP THE OPERATION.

DEEP CLEANING


1

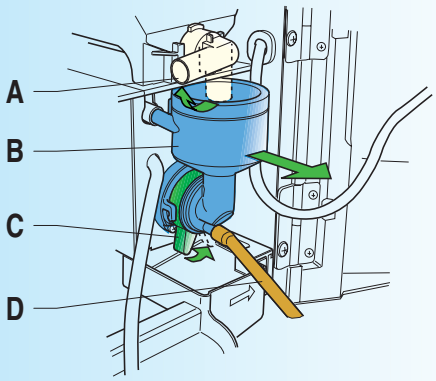

Removing and sanitising the mixer:

- Detach tube (**D**) from mixer.
- Rotate the product dispensing nozzle (**A**) upwards.
- Rotate the lever (**C**) anticlockwise.
- Take hold of the mixer assembly (**B**) firmly, and pull.


2

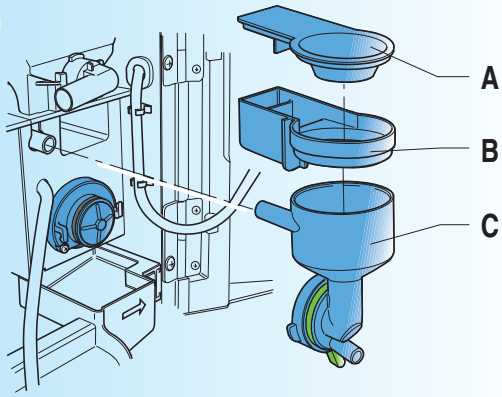

Removing and sanitising the mixer:

- Separate all the mixer assembly components: product funnel (**A**), powder deposit drawer (**B**), mixing bowl (**C**).


3

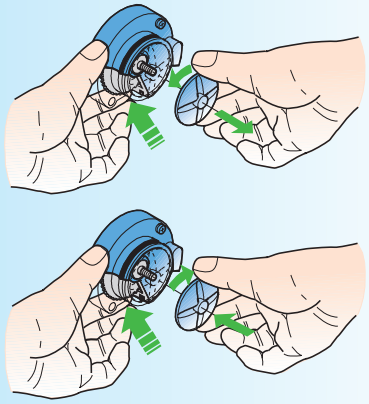

Removing and sanitising the mixer:

- To remove mixer impellers, use a finger to hold the cogged disk fitted on the mixer shaft below the mixer chamber.
- Unscrew the impeller.
- Thoroughly wash, rinse and dry all of the removed components.
- Reassemble the impeller.


4

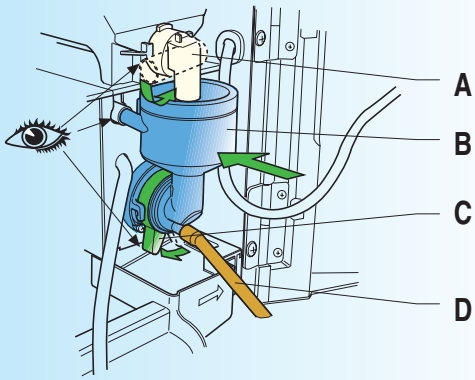

Reassemble the mixer:

- Reassemble all the mixer (**B**) components.
- Rotate the lever ring (**C**) clockwise to lock the mixer onto the dispenser.
- Rotate the product dispensing nozzle (**A**) back down again.
- Connect the tube (**D**) to the mixing bowl.


5

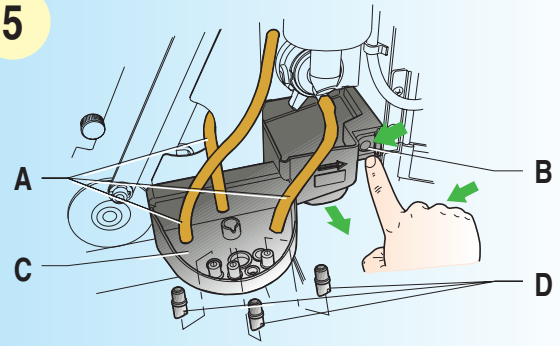

Cleaning the dispensing spouts:

- Detach the tubes (**A**) from the dispensing spouts.
- Press pushbutton (**B**) to release the dispensing spouts carrier plate (**C**).
- Detach the dispensing spouts (**D**) from spout holder (**C**).
- Thoroughly wash and dry all the relative components.

6

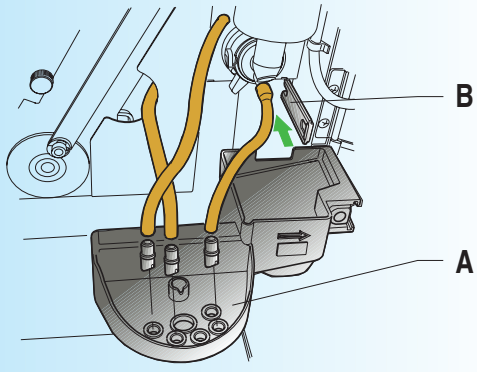


Assembling of the dispensing spouts carrier plate:

- Insert the dispensing spout holder (**A**) into guide (**B**) and press until it clicks.
- Reinsert the dispensing spouts onto the spout holder and connect the tubes onto their spouts.

DEEP CLEANING


7

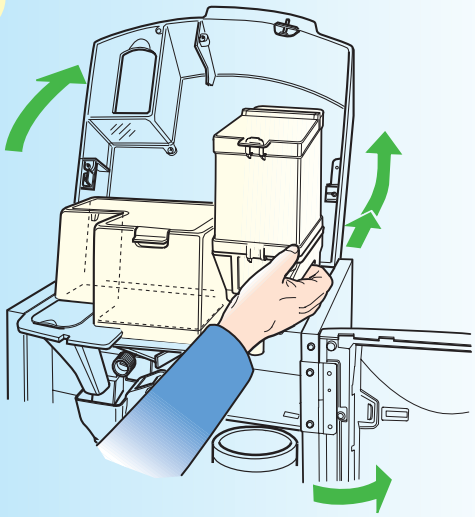

Instant powder container:

- Open the door of the dispenser and lift the upper lid.
- Lightly push back and lift the instant powder container.
- Remove it from the dispenser.
- Brush the container and base.
- Refit the container into dispenser.


8

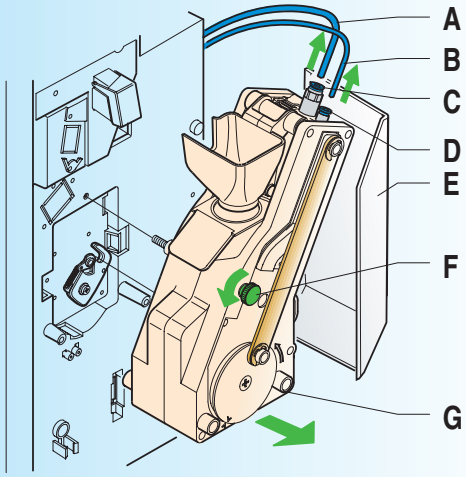

Removing and cleaning the espresso brewing unit:

- Detach hoses (**A**) and (**B**) from couplings (**C**) and (**D**).
- Detach the coffee waste conveyor (**E**).
- Undo fixing pin (**F**).
- Remove the espresso brewing unit (**G**).
- Brewer unit can be washed with running water.
- Dry and re fit the espresso brewing unit.

9

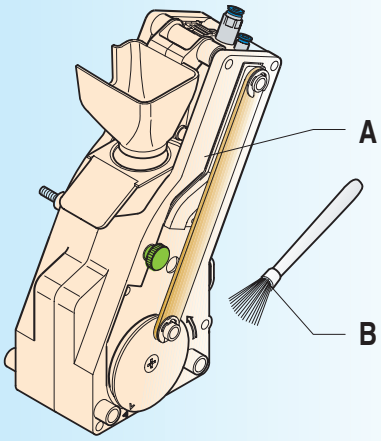


USE MILD DETERGENTS FOR CLEANING.
DO NOT USE SOLVENTS OR SCENTED CLEANING PRODUCTS.

Removing and cleaning the espresso brewing unit:

- Every time the unit is filled up or at least once weekly, remove any coffee residues from around the brewing unit (**A**).
- To do so, simply use a brush (**B**) or a small vacuum cleaner.

10

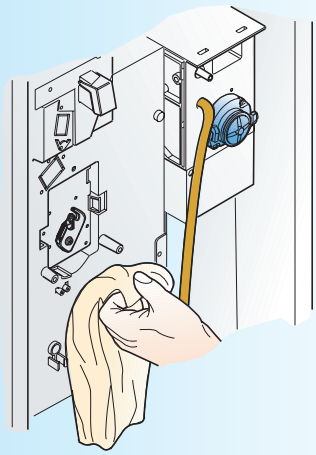

Internal dispenser cleaning:

- Clean the inside of the dispenser using a mild detergent solution and a lightly damp cloth.